

Tsunami AT1

The AT1 maintains the water level in your sump by pumping water from a standby reservoir. When the water drops below the low water level, it starts the pump and refills the sump up to the high water level. This difference in water height prevents frequent pump turn on and premature failure of the pump.

- Installation**
1. Attached the sensor airline tubing to the Tsunami AT1 base unit
 2. Plug the reservoir pump into the AT1's outlet
 3. Attach the suction cups to the Sensor and install in the sump
 4. Plug the AT1 power cord into an outlet
 5. Adjust the sensor height to maintain the desired water level

